



# DriveRack<sup>®</sup>

## VENU360-D

SPEAKER MANAGEMENT SYSTEM

 
dbx Professional Products  
801.566.8800  
dbxpro.com

PN: 5067024-A

# DriveRack<sup>®</sup>


## VENU360-D

Quick Start Guide

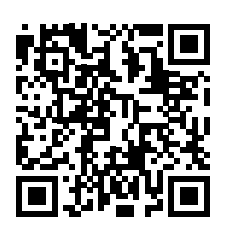

## DOWNLOAD THE OWNER'S MANUAL

 Get the owner's manual at <http://dbxpro.com/en-US/products/driverrack-venu360-d#documentation> or scan the code to the right with a QR scanner app on your mobile device to go straight to web URL.

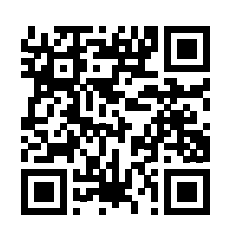


## PRODUCT REGISTRATION

Register your product at <http://dbxpro.com/en-US/support/warranty> or scan the code to the right with a QR scanner app on your mobile device to go straight to web URL.

## WHAT'S IN THE BOX

 - DriveRack VENU360-D Processor
- Power Cable
- Rack Mount Screw Kit

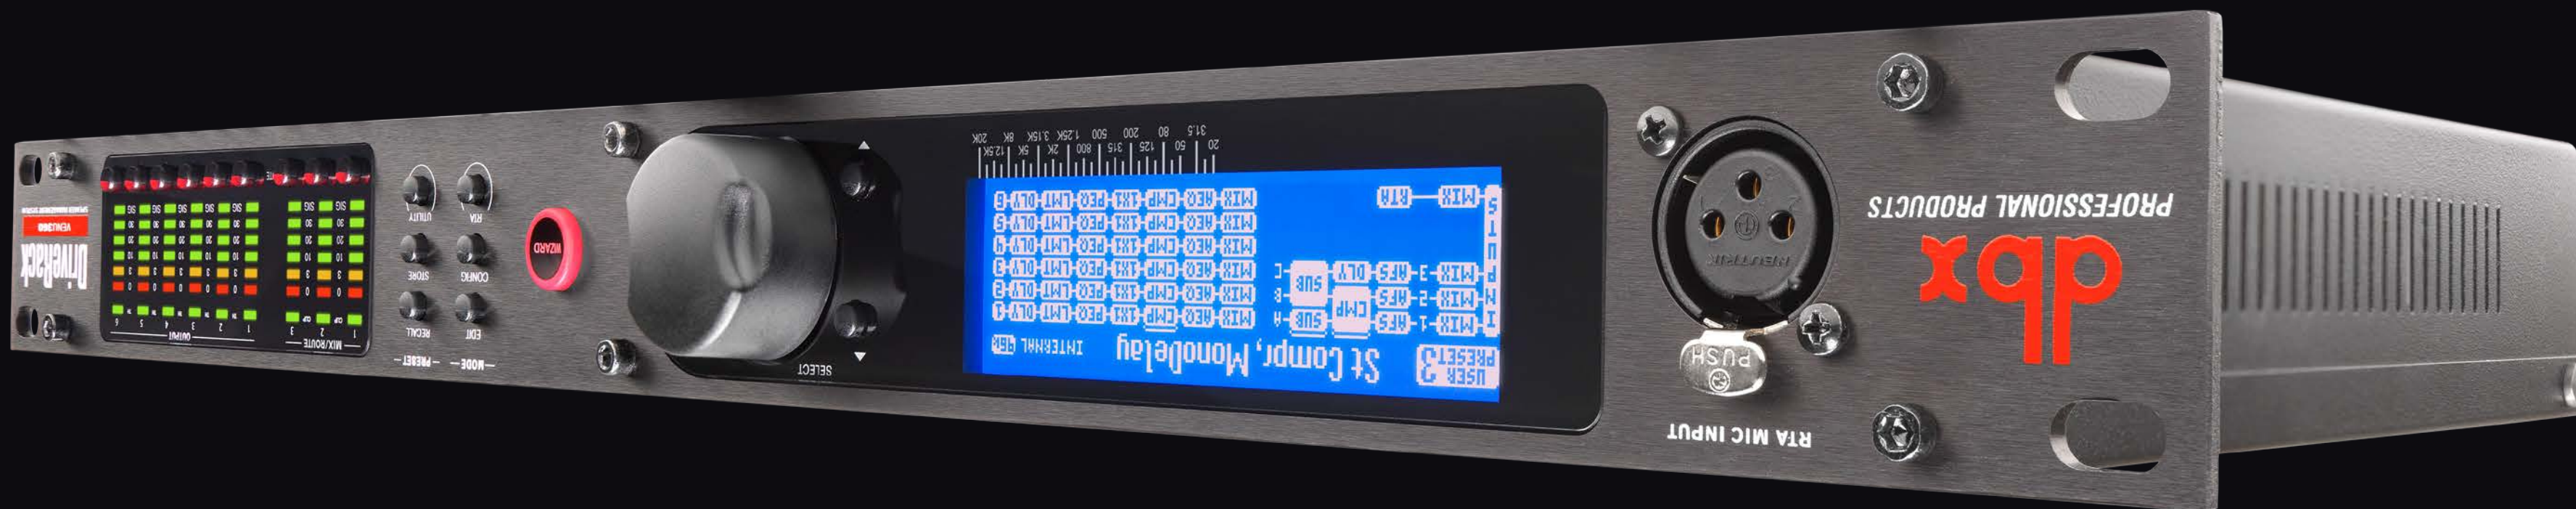



## 1 GETTING STARTED

Before making any audio connections, perform the following:

- Ensure power to your mixer, DriveRack, and amplifier(s) are turned off.
- Turn the attenuators on all power amplifiers or powered speakers all the way down.
- Make connections per your application using the system diagrams to the right for reference.
- Power up the mixer, then the DriveRack, then your amplifiers or powered speakers.

## 2 RUN THE SETUP WIZARD

 
- Press the **WIZARD** button.
- Select the "RUN ALL WIZARDS" option using the **DATA WHEEL**.
- Follow the on-screen instructions and make the desired configuration selections.

**NOTE:** Dante™ channels must be routed to the VENU360-D using Audinate®'s Dante Controller software available at <https://www.audinate.com/products/software/dante-controller>.




## 3 CALIBRATE THE SYSTEM

- When you reach the Level Assist/AutoEQ™ Wizard, connect the optional dbx RTA-M measurement microphone to the RTA MIC INPUT and place it in a mic stand. If you don't have the RTA-M mic, skip Level Assist/AutoEQ and go to step 4.
- Place the RTA-M microphone as shown in the illustration to the right – the placement of the microphone should form an equilateral triangle with the Front of House loudspeakers. If performing AutoEQ on monitors, follow the DriveRack's on-screen instructions.

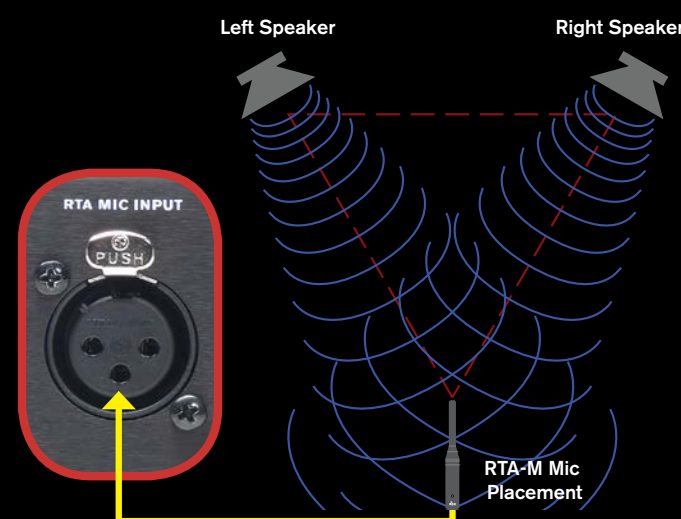

## 4 RING OUT THE SYSTEM FOR FEEDBACK

 When you reach the AFS™ (Advanced Feedback Suppression) Wizard, ensure all performance microphones are connected and follow the on-screen instructions to ring out the system for potential feedback. All mics should be active, but there should be no signal present at the microphones during this procedure.

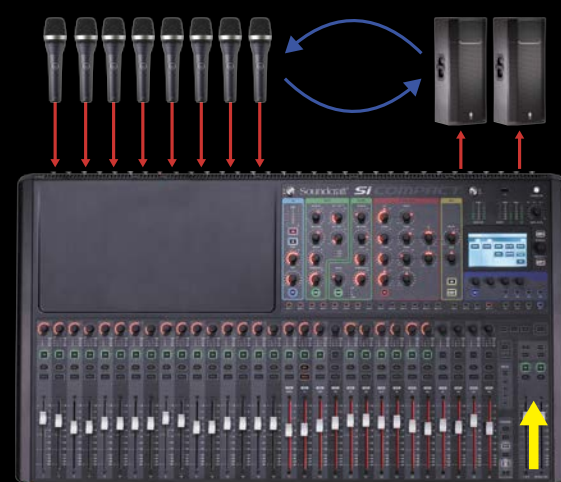

## 5 CONNECT TO YOUR NETWORK

Connect the DriveRack's Ethernet port to your computer, network switch, or wireless router for network setup and control using the free VENU360 control app for compatible Mac®, Windows®, Android®, and iOS® devices. Visit [www.dbxpro.com](http://www.dbxpro.com) for further details.

**NOTE:** The VENU360's network address can be configured manually or dynamically using a DHCP enabled switch or router. By default, DHCP is enabled. Network settings can be changed in the Utility menu.

 


© 2015 Harman. dbx Professional Products is a registered trademark of Harman. All rights reserved. All features and specifications are subject to change. Macintosh, iPad, iTunes, and App Store are trademarks of Apple Inc., registered in the U.S. and other countries. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Windows is a registered trademark of Microsoft Corporation in the United States and other countries. Android is a trademark of Google Inc..


dbx<sup>®</sup> by HARMAN

DriveRack<sup>™</sup> VENU360-D  
SPEAKER MANAGEMENT SYSTEM


### MONO 2-WAY FOH + 2 STAGE MONITORS

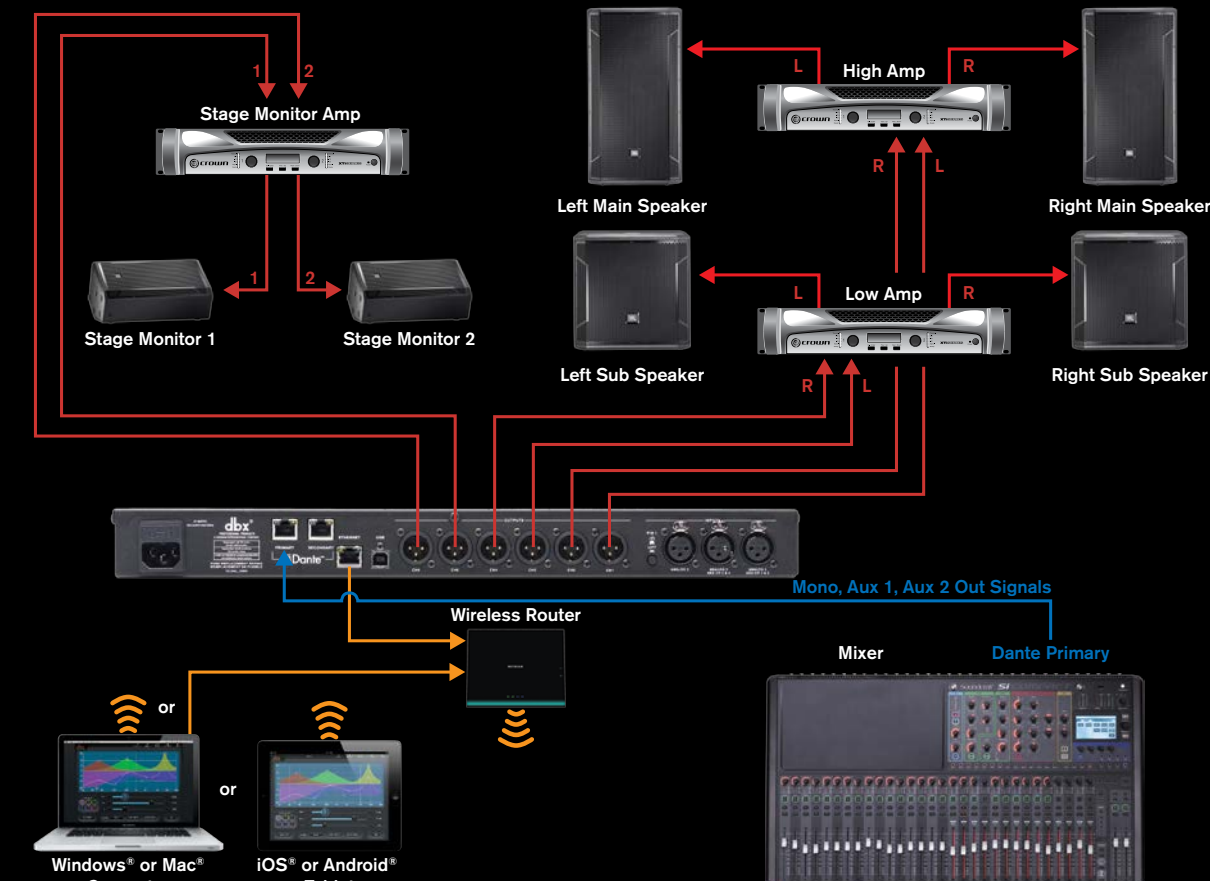

### STEREO 2-WAY FOH W/AUX-FED SUB + 2 ZONES OR DELAYS

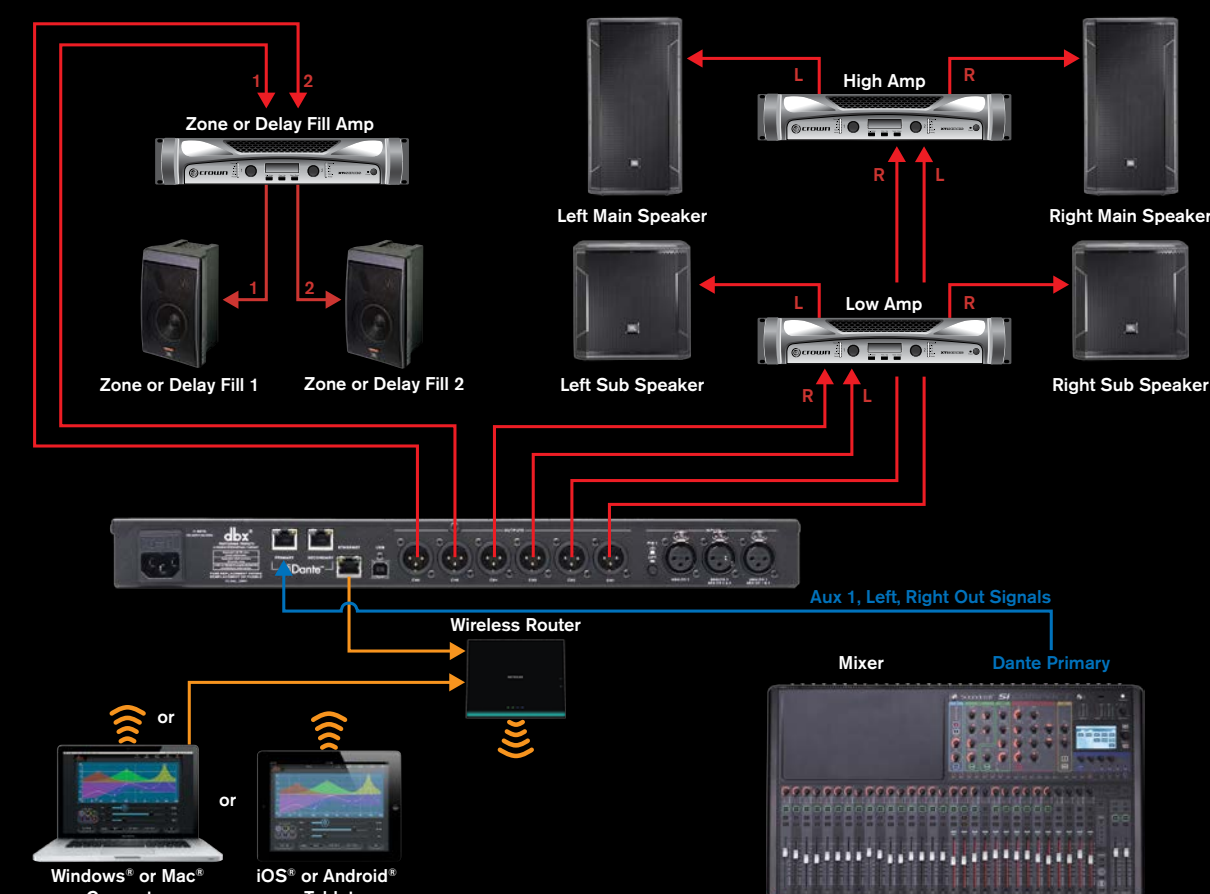 

### LCR 2-WAY FOH

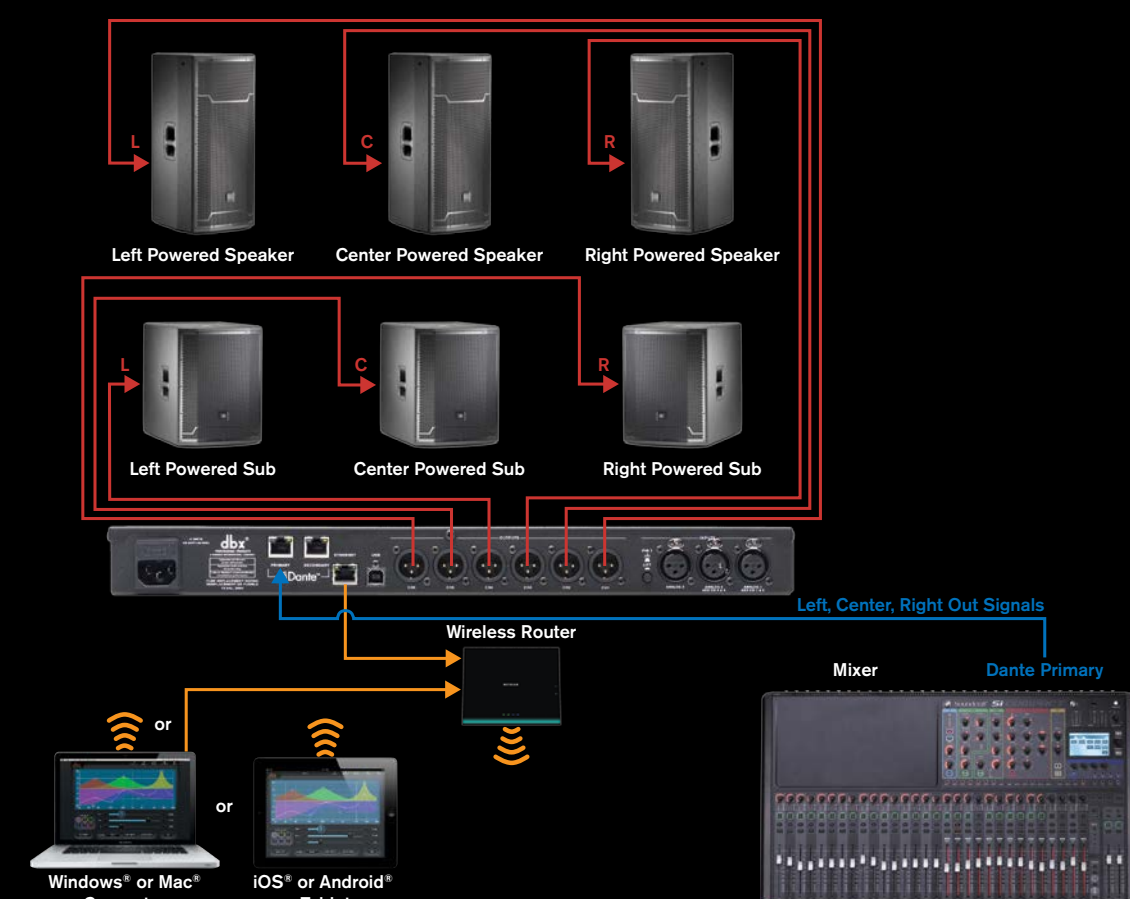 

#### LEGEND

- Analog Audio Connection
- Dante Connection
- Ethernet Connection
- Wi-Fi Signal
- L Left Signal
- C Center Signal
- R Right Signal

**NOTE:** For best performance, use CAT5e or higher straight-through Ethernet cables for Dante connections. See owner's manual for further information.